



M4X25=2

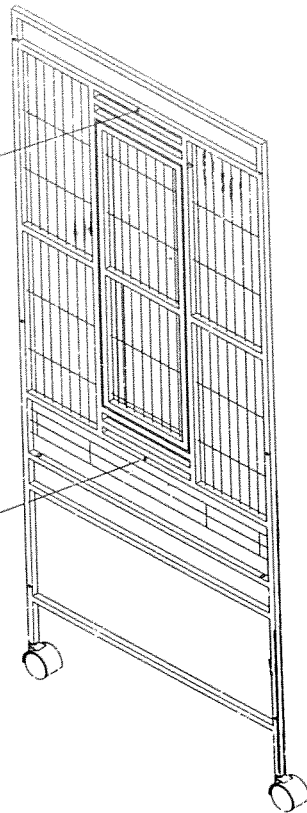

Spring



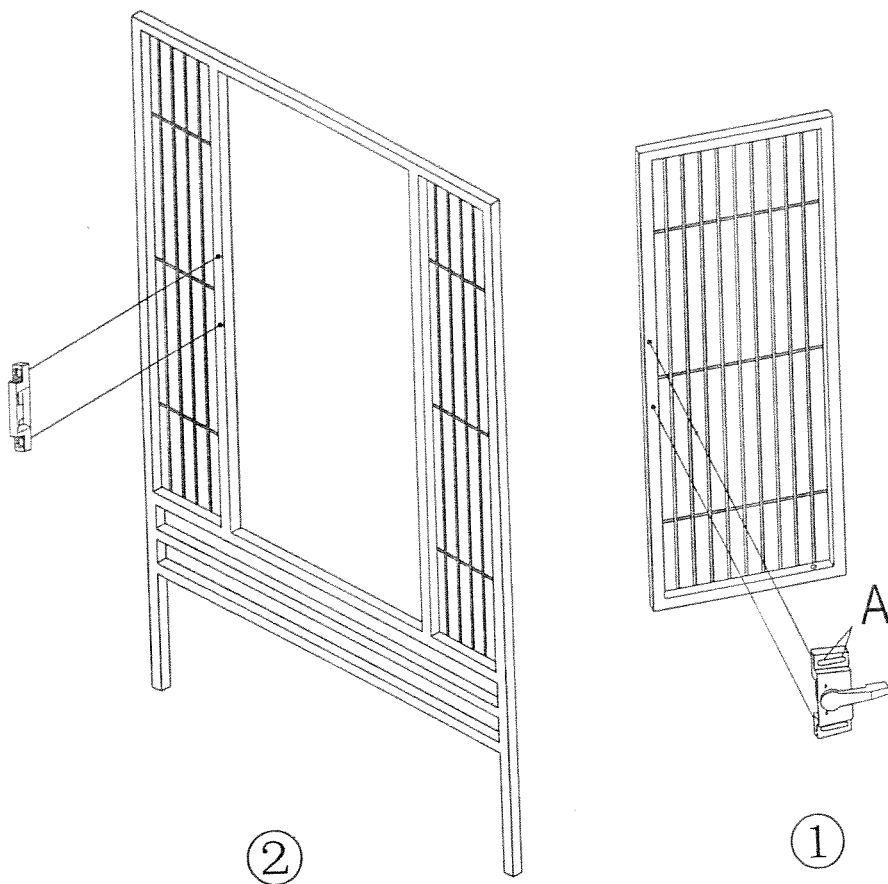

1. Please follow the instructions ① and ② to install the lock.
2. To adjust the position of lock over the lock's A of ①.