


Box List

CC2727

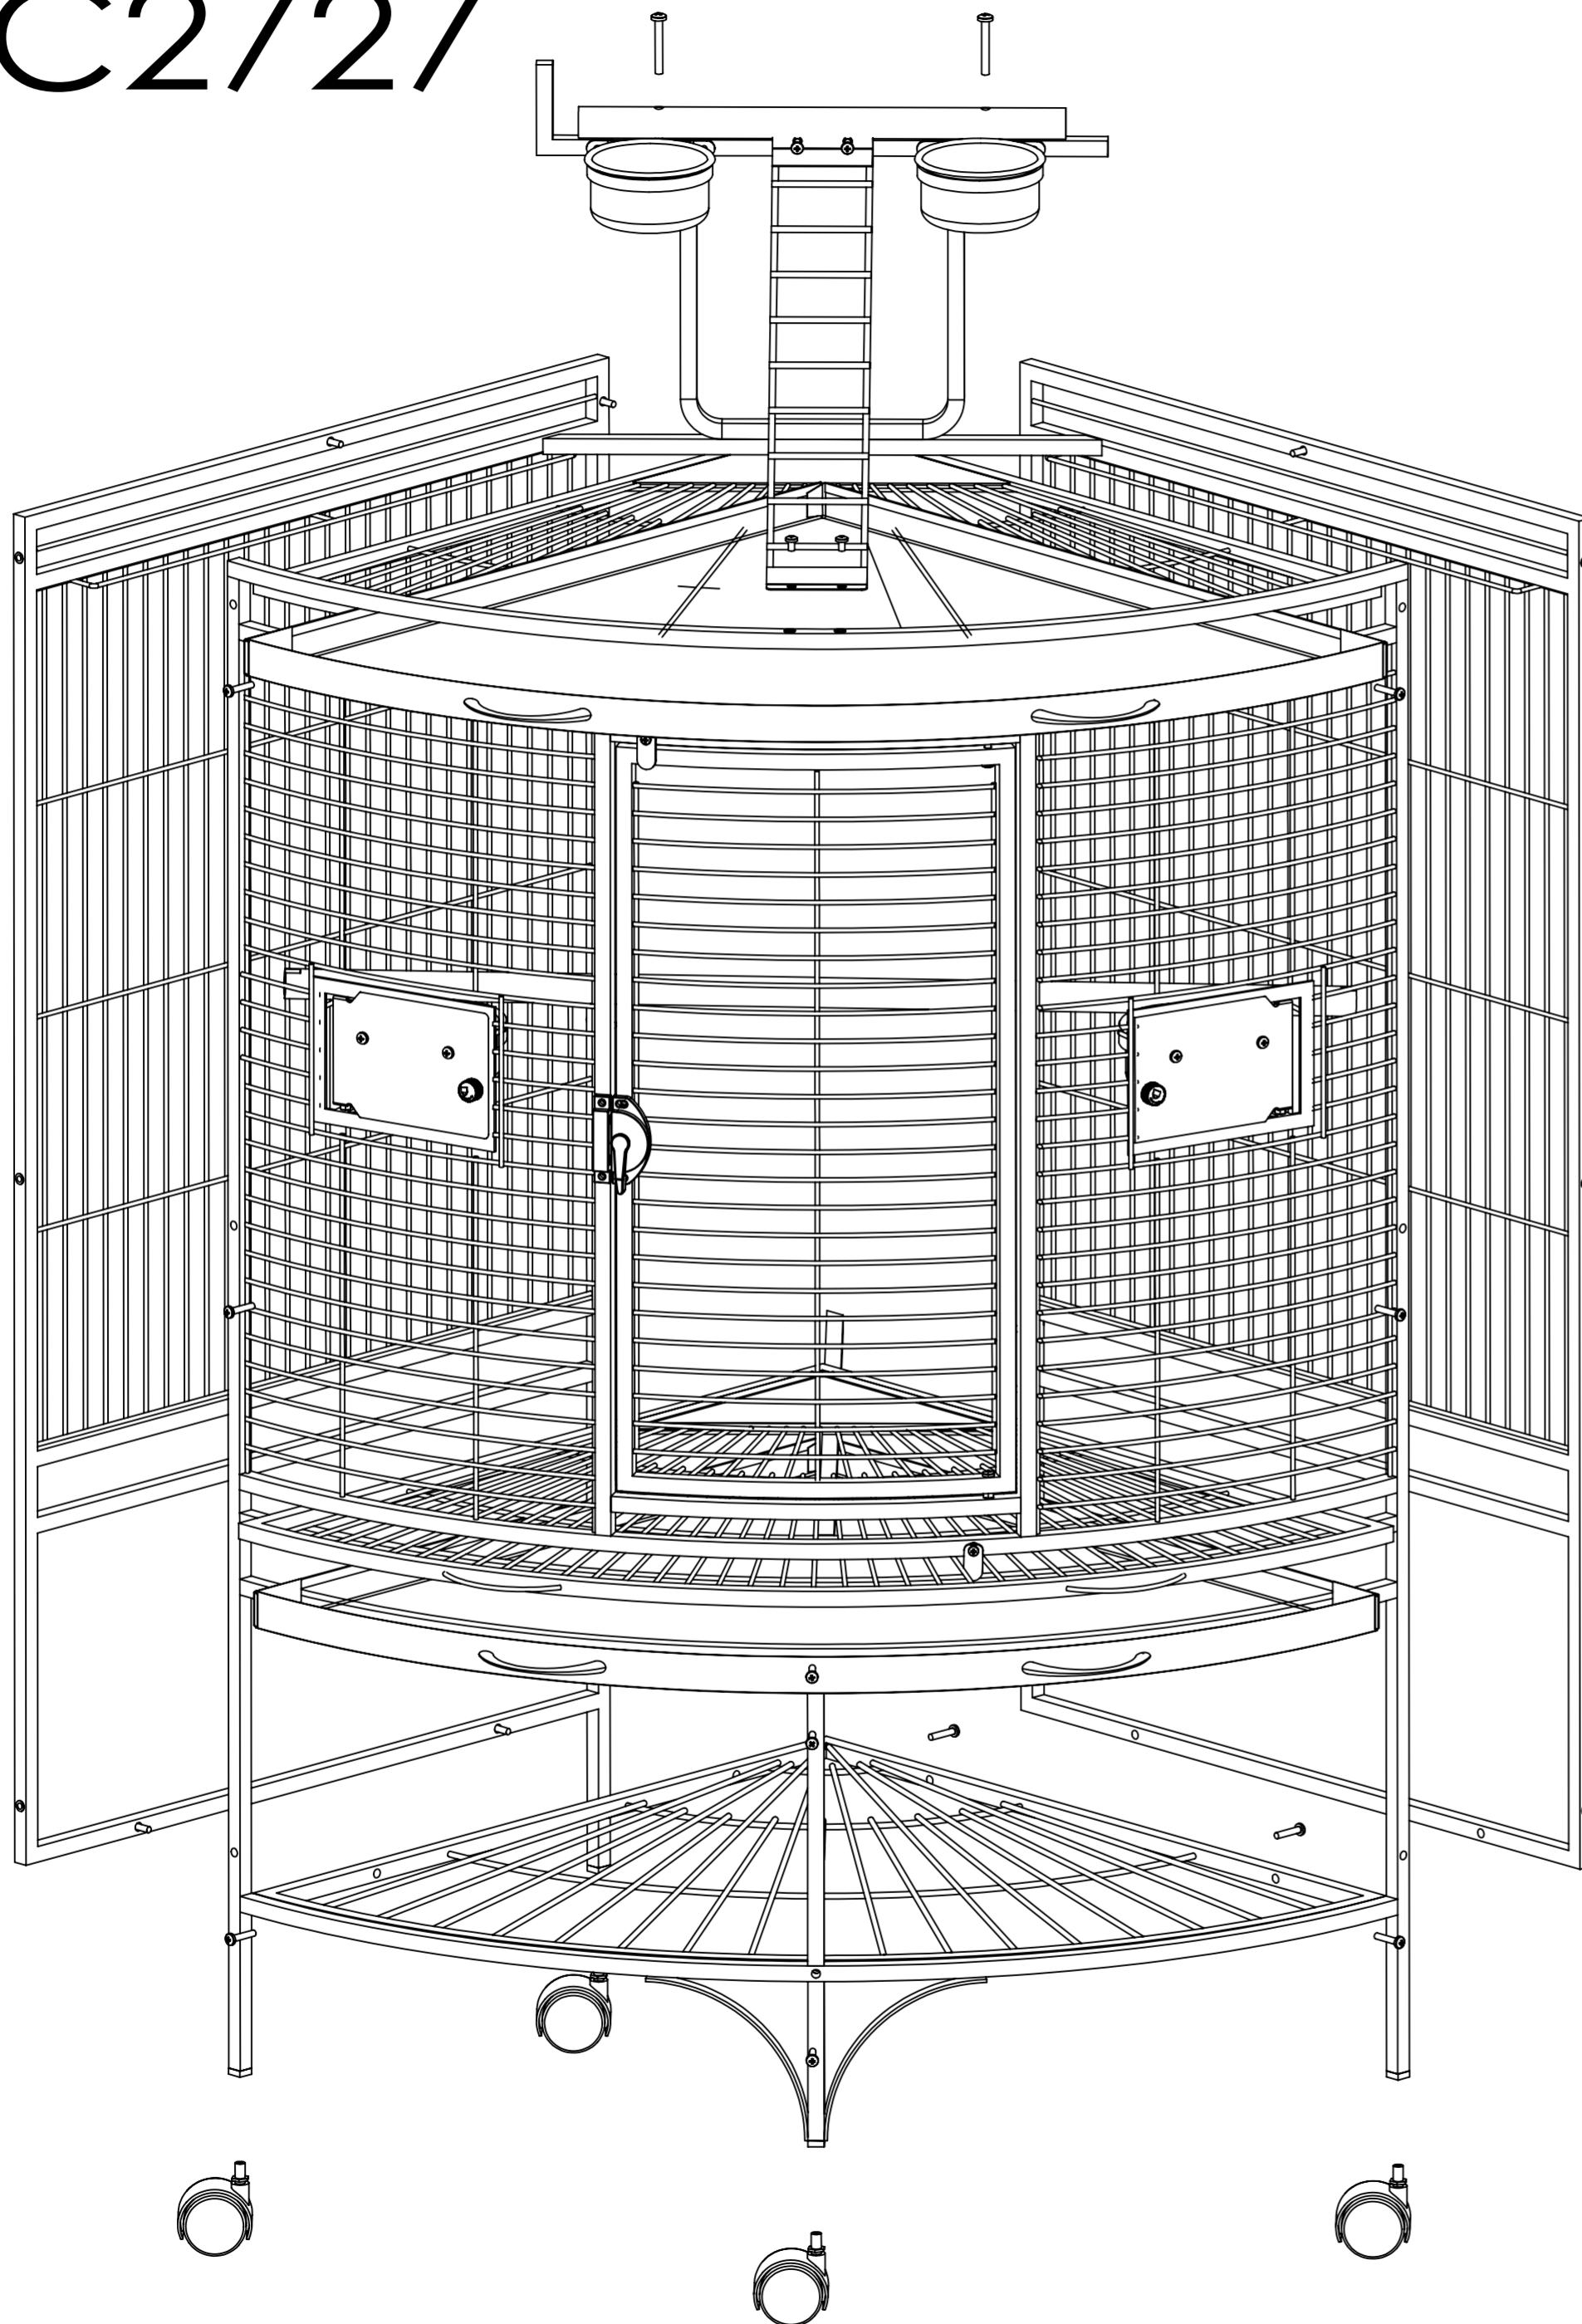

Item No:	CC2727			
Box		Worker	Q C	ganger
Part name	Quantity			
Front wire(前网)	1pcs			
Back wire with leg(后网有脚)	1pcs			
Back wire no leg (后网没脚)	1pcs			
Assembly Instructions(包装图)	1pcs			
Upper perch(上棍)	1pcs			
Bottom perch(下棍)	1pcs			
Grill(密网)	1pcs			
Bottom wire(脚网)	1pcs			
Stairs (支架)	1pcs			
Top panel(wire)(盖网)	1pcs			
Tray (盆)	2pcs			
Playtop tube (支架方管)	1pcs			
Tube(方管)	2pcs			
Wheels(2寸8厘脚轮)	4pcs			
4" ss cup(4寸杯)	2pcs			
4" holder(4寸合圈)	2pcs			
Screw bag(螺丝包)	1pcs			

1. Screw 3x wheels onto bottom of front wire & 1x wheel onto bottom of back wire(with leg);
2. Attach front 、 2x back wire together with screws to for a body;
3. Attach the 2x tube to the front & back wire together with screws;
4. Attach the bottom wire to the front & back wire together with screws;
5. Slide top wire onto top of body;
6. Slide tray into the body from the front wire;
7. Slide tray and grill into the body from part B;
8. Assembly stairs and toy hook stand onto the top of the body;
9. Open the front door and put perch from left to right inside the body;
10. Open the dish door and put the dish into the holders;
11. Fixup all the screws.